# resideo Boiler Room Valves



## **Braukmann** TS131

Temperature relief valve With test facility and double sensor

## APPLICATION

The TS131 temperature relief valve for heating systems according to EN 12828 is a self-acting valve which is activated by the flow temperature of the heat generator. It opens and discharges water from the heat generator or condensing coil at a flow temperature of 95 °C and thereby prevents a significant temperature rise in the heat generator.

## SPECIAL FEATURES


- Construction tested to EN 14597
- Immersion pocket with double heat sensors
- Test facility
- Capillary tube protected against kinking by steel sheath
- Immersion pocket with external thread
- Pressure balanced construction



## **TECHNICAL DATA**

Media			
Medium:	Drinking water		
<b>Connections/Sizes</b>			
Connection sizes:	Rp <sup>3</sup> /4" (DIN EN 10226)		
Pressure values			
Max. operating pressure:	10 bar		
Operating temperatures			
Operating temperatures:			
TS131-3/4 A+B	95 °C		
TS131-3/4ZAx	x=50/100/110°C		
Max. ambient temperature:	70 °C		
Specifications			
Heating system capacity:	max. 100 kW		
Capacity:	2800 kg/h water at the pressure drop $\Delta$ p=1 bar (Inlet pressure 5 bar; Outlet pressure 4 bar; 110°C medium temperature) (1 capillary tube)		
Mode of operation:	2 Kp Solid/dual-fuel boilers with integrated water heater or cooling coil in closed heating systems according to EN 12828		

## CONSTRUCTION

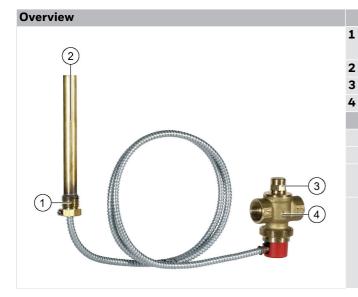

## **METHOD OF OPERATION**

The temperature relief valve is controlled by the supply temperature of the heat exchanger. It consists of a springloaded valve and a temperature sensor, which is acting on a bellows system. When the supply temperature in the boiler reaches the specified opening temperature (see versions), the force in the bellows system exceeds the spring force of the valve, and the valve opens.

In case of installation upstream of the boiler, in the cold water supply of the boiler's integrated heat exchanger:

The temperature relief valve closes the supply to the heat exchanger. The heat exchanger itself remains dry in normal operation. If the temperature relief valve is opened, the heat exchanger fills up and dissipates excessive heat from the heating water to the drain.

In case of installation downstream of the boiler, at the hotwater outlet:

The temperature relief valve closes the outlet. If the temperature relief valve opens, the heated city water is drained from the heater and replaced with cold water from the supply. This water can now absorb the excessive heat from the water heater to prevent overheating.

## TRANSPORTATION AND STORAGE

Keep parts in their original packaging and unpack them shortly before use.

The following parameters apply during transportation and storage:

Parameter	Value
Environment:	clean, dry and dust free
Min. ambient temperature:	5 °C
Max. ambient temperature:	55 °C
Min. ambient relative humidity:	25 % *
Max. ambient relative humidity:	85 % *

\*non condensing

Components	Materials
Immersion sleeve G <sup>1</sup> /2"	Brass
(ISO 228)	
Immersion pocket	Brass
Bonnet	Brass
Housing	Brass
Not depicted components:	
Valve piston	Brass
Spring	Spring steel
Remote double temperature	Copper
sensor with capillary tube	
Seals	Heat-resistant elastomer
	Immersion sleeve G <sup>1</sup> /2" (ISO 228) Immersion pocket Bonnet Housing <b>Not depicted components:</b> Valve piston Spring Remote double temperature sensor with capillary tube

## **INSTALLATION GUIDELINES**

#### Setup requirements

- The valve and the sensor must be installed carefully to avoid any damage to the capillary tube
- The opening on the blow-out line must be clear and easy to monitor
- Ensure no persons are in danger when blowing off the valve
- A sufficiently dimensioned discharge line must be provided
- This valve requires regular inspections according EN 806-5 to ensure correct function
- Installation max. 10 x DN according to DIN 1988-100
- Requires regular maintenance in accordance with EN 806-5

#### Installation Example

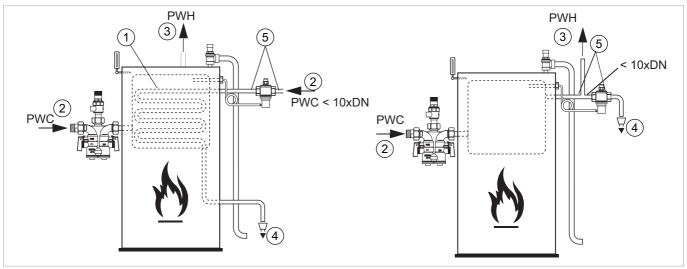


Fig. 1 Standard installation example for the temperature relief valve

- 1 Safety heat exchanger
- 2 Potable water cold (PWC)
- 3 Potable water hot (PWH)
- 4 Outlet
- 5 min. DN20 (3/4")

## **TECHNICAL CHARACTERISTICS**


#### kvs-Values

	with 2 intact sensor systems	with 1 intact sensor system
k <sub>vs</sub> -value (m <sup>3</sup> /h):	3	2.1

Note: kvs-value at p = 1 bar and at 110°C medium temperature

Attention! Installation of the thermal discharge safety valve does not replace the diaphragm relief value in the cold water supply line to the water heater.

## DIMENSIONS

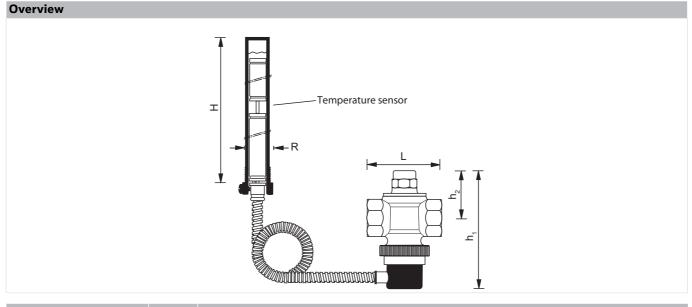

Parameter		Values
Connection size:	R	1/2"
Dimensions:	Н	152
	h1	98.5
	h <sub>2</sub>	40
	L	62
Weight:	kg	0.76

Note: All dimensions in mm unless stated otherwise.

Product Specification Sheet • ENOH-1543GE23 R0420 • Subject to change

## **ORDERING INFORMATION**

The following tables contain all the information you need to make an order of an item of your choice. When ordering, please always state the type, the ordering or the part number.

#### Options

The value is available in the following sizes: 3/4"

- standard
- not available

		TS131-3/4A	TS131-3/4B	TS131-3/4ZAx
Opening temperature:	95 °C	•	•	-
	x=50/100/110°C	-	-	•
Capillary tube with protection sheath:	1300 mm *	•	-	•
	4000 mm	-	•	-

### \* with approved construction

#### Spare Parts

Temperature relief Valve TS131, from 2011 onwards





Manufactured for and on behalf of Pittway Sàrl, Z.A., La Pièce 4, 1180 Rolle, Switzerland by its authorised representative Ademco 1 GmbH For more information homecomfort.resideo.com/europe Ademco 1 GmbH, Hardhofweg 40, 74821 MOSBACH, GERMANY Phone: +49 6261 810 Fax: +49 6261 81309

© 2020 Resideo Technologies, Inc. All rights reserved.

Subject to change. EN0H-1543GE23 R0420